


TURBO LOADER™ INSTALLATION ON SPYDER/COMPATIBLES

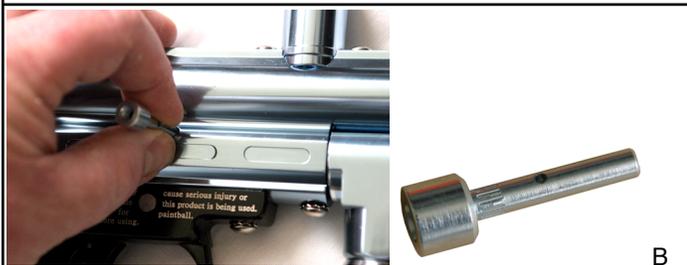

WARNING: Insure that all power sources are removed before disassembly.

STEP 1. Locate the VALVE POSITIONING PIN on your marker (as shown in diagram A). Find the knurled end. Lay your marker knurled side down on your lap allowing access to the Valve Positioning Pin.

STEP 2. Place the small end of the POWER TAKE OFF PIN (9) firmly against the Valve Positioning Pin (as shown in diagram B)

STEP 3. Lightly tap through using a small hammer.
IMPORTANT: KEEP YOUR ORIGINAL VALVE POSITIONING PIN. IT IS REQUIRED WHEN UN-INSTALLING YOUR TURBO LOADER™

STEP 4. Attach 90 degree elbow (8) (as shown in diagram C).

STEP 5. Attach hose (7) (as shown in diagram C).

STEP 6. Press the TURBO LOADER™ downward into the marker feed port until secure. Position the loader lid to the rear of the marker. Once in position, make sure the fit is secure and tight.


STEP 7. Measure hose (7) to allow for approximately 1" slack.

STEP 8. Cut hose (7) and attach to the NIPPLE (6) located at the bottom of your TURBO LOADER™.

STEP 9. Open the clear flip lid by pushing upward on the front lip of the lid.

STEP 10. Fill your TURBO LOADER™ with paintballs until the balls reach the MAX FILL LINE as indicated on the flip lid. APPROX. 225 RNDs. (MAKE SURE NOT TO OVERFILL)

STEP 11. Close lid by pushing downward until it snaps firmly shut.

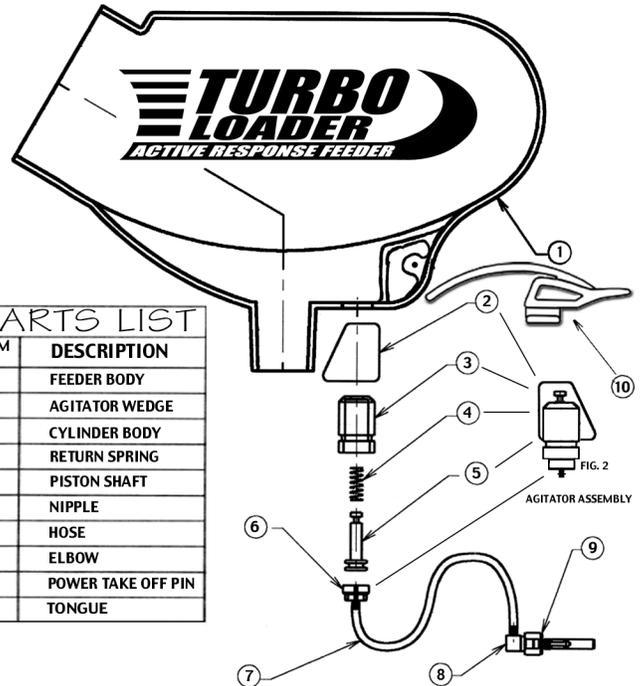

MAINTENANCE GUIDE DISASSEMBLY

STEP 1. Remove HOSE (7) from your TURBO LOADER™ by pulling gently downward.

STEP 2. Carefully remove your TURBO LOADER™ from the markers feed port with a gradual twist while pulling upward. Open lid and remove any remaining paintballs.

STEP 3. Using a #2 phillips screwdriver, remove the four body screws from the side of your TURBO LOADER™.

STEP 4 Carefully separate the two body halves by gently pulling them apart. Then remove the AGITATOR ASSEMBLY (FIG. 2) and TONGUE (10).

STEP 5. Wash loader in cool water. Use a damp cloth to remove any remaining paintball fill. Using a soft cloth, dry all parts by hand completely before reassembling your TURBO LOADER™.

REASSEMBLY

STEP 1. Replace the AGITATOR ASSEMBLY (Fig. 2) and tongue (10).

STEP 2. Carefully align the body halves together. Snap the flip lid shut to hold the halves in place.

STEP 3. Using a #2 phillips screwdriver, replace the four body screws into the side of your TURBO LOADER™.

MAKE SURE NOT TO OVER TIGHTEN SCREWS. THIS MAY STRIP THE THREADS OF YOUR TURBO LOADER™ AND THUS VOID THE WARRANTY.